



ELECTRONIC NAVIGATION CONSOLE

Quick User Guide

Quick User Guide ENC v.2

© Copyright by Marine Tech SA

All rights reserved.

Disclaimer

This document is protected by international copyright laws.

The content is proprietary to Marine Tech SA ("Marine Tech"), and no ownership rights are hereby transferred. No part of this document shall be used, reproduced, translated, converted, adapted, stored in a retrieval system, communicated or transmitted by any means, for any commercial purpose, including without limitation, sale, resale, license, rental or lease, without the prior express written consent of Marine Tech.

Marine Tech makes no representations, warranties or guarantees, express or implied, as to the accuracy or completeness of the manual. Users must be aware that updates and amendments will be made from time to time to the manual. It is the user's responsibility to determine whether there have been any such updates or amendments. Marine Tech nor any of their directors, officers, employees or agents shall be liable in contract, tort or in any other manner whatsoever to any person for any loss, damage, injury, liability, cost or expense of any nature, including without limitation incidental, special, direct or consequential damages arising out of or in connection with the use of the manual.

Marine Tech accepts no liability for damages and/or injuries caused by improper use of the Seacraft ENC2 as well as a result of its use in a manner contrary to or deviating from principles set out in this manual.

Marine Tech accepts no liability for accidents and damage resulting from incorrect use of the ENC2 resulting from failure to read the ENC2 manual or lack of knowledge on the content of labels and pictograms, warning and information signs.

This manual is no substitute for a proper training in how to dive and navigate under water, with or without use of ENC2.

Should you have any questions or comments regarding this manual, please contact:

Manufacturer:

MARINE TECH SA

ul. Żwirki i Wigury 17
38-400 Krosno , Poland

Email: info@seacraft.eu

Web: www.seacraft.eu

Document Information:

Title:	Quick User Guide Seacraft ENC2
Document Version:	1.2.2
Software Version:	1.5
Publication Date:	3.04.2019

Table of Contents

1. Technical specifications	6
2. Precautions	7
3. Mechanical construction	8
4. Control	9
5. Main screen layout.....	11
6. Additional information screen (next to main).....	16
7. Destination parameters - setting and changing.....	20
8. MENU screen	24
9. Depth profile graph.....	27
10. Swim route graph	28
11. TIMER / stopwatch	29
12. Device configuration (SETUP)	30
13. Send data	30
14. Pressure/salinity.....	31
15. Log/speed.....	32
16. Log/speed calibration	34
17. GPS.....	36
18. Time/date	37
19. Other settings.....	38

20.	Units	39
21.	Compass	40
22.	Clear data	44
23.	Factory reset	44
24.	Exit	44
25.	Guidelines for attaching the ENC to DPVs.....	45
26.	Troubleshooting	47
27.	Before each dive	49

1 Technical specifications

Model	ENC II	Power source	Built-in Li-ion 3,7V battery
Type	ENC v.2	Battery capacity	5Wh
Maximum depth	300 m	Typical working time	20-35 h
Tested depth	350 m	Average charge time	< 2 h
Depth of start and stop of immersion time counting	Optional: 0.5, 1 or 1.6m (compatible with the norm EN 13319)	Working temperature	+10 ... +45 °C
Accuracy of depth measurement	0.3m in the whole depth range, temp. range: 0...30°C	Storage temperature	-20 ... +45 °C
Accuracy of compass	5 degrees*	Temperature when charging	+10 ... +40 °C
Accuracy of ext. log	2%*	Mounting type	Universal
Possibility of using above the water level	up to 5000m	Internal storage capacity	50 routes
Weight / displacement	290 g / -90g	Length x height x width	95 x 71 x 30,6mm

* The accuracy of the measurement depends on the quality of the calibration and the absence of external interference.

Included sensors: 3D magnetometer, 3D gyroscope, 3D accelerometer, pressure sensor, temperature sensor.

Satellite positioning: GPS, Beidou, GLONASS

Data exchange: via Bluetooth 4.2. Temperature range: 0 ... 40°C

Power source: Li-Ion battery cell 5 Wh. Device can use any 5V DC power source as charger. When charging, it can consume up to 1A current.

2. Precautions

This manual is suitable for the navigation device with software version 15.04 to 15.09. the Software version number is shown under **MENU**, when the battery voltage is displayed (**OFF** option selected).



WARNING !

This device may have some bugs in the software, which we did not find yet.

You should never risk your life using this device as sole advisor.

Electronic devices are designed for support and cannot substitute knowledge and training.



Li-ion

Waste disposal information:

This device contains Li-Ion cells and other materials, which must be recycled properly.

3. Mechanical construction



Fig. 1 Description of elements.

- 1 Universal mounting – top side
- 2 Ambient light sensor (do not cover)
- 3 Additional LED diode (red color)
- 4. Screen / display
- 5. Top button (NEXT)
- 6. Bottom button (SET, REC, HOLD)
- 7. External socket – for charging and speed sensor
- 8. Universal mounting – bottom side

4. Control

Button functions (depending on actual screen content):

Top button (5) – NEXT screen, NEXT item, CANCEL change, BACK

Bottom button (6) – SET, change value, enter changing item, switch REC/HOLD

Note



On most screens, a small graphical hint is displayed in top and bottom right corner of the display.

This hint is connected with the actual button function. It may be one of the below:



- Move cursor/selection down to next item



- Go to next screen



- Go to previous screen



- Select current item



- Cancel or delete



- Switch to next available value



- Increment current value by 1

First steps - switching on and off:

Switching on the device – press both buttons at the same time.

The device will also switch on when immersed in water min. 0.3 m (1ft) deep.

Switching off the device – You have to stop recording first. Then go to MENU (from main screen –press the top button 3 times, then press the bottom button once). When the **OFF** command is selected, press the lower button.

The device will switch off automatically when the diving depth is less than 0.5 m and recording is off (HOLD).

Modes of operation:


Normal operation mode – Default mode after power on. The user sees the current dive parameters, may switch recording ON (REC) and OFF (HOLD), enter settings and view the contents of the device's internal memory.

Charging mode – After connecting the device to a power source, the charging screen appears. The buttons are inactive in this mode. This mode will be terminated, when the battery is fully charged or the power source is disconnected.


Service mode – When a software update was requested, the device switches to this mode. The screen is blank and the LED above the display is blinking. This mode ends automatically after less than 3 minutes.

5. Main screen layout

After power on, the device display will show this content:

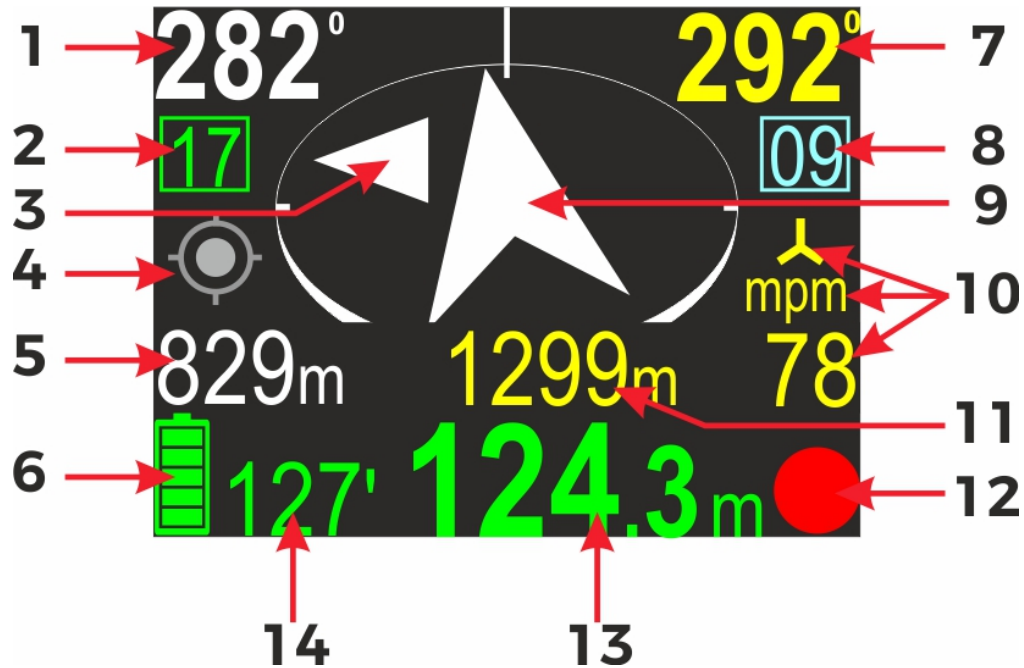

Screen elements:

1. Course to planned destination. If no destination is programmed, this field is blank.
2. Present memory slot number. If you start recording, the dive data will be saved in the device memory with this number.
3. Small deviation marker (described below).
4. GPS state marker (described below).
5. Time/distancer to destination. These values alternate every 3 seconds. This field may be blank, if the corresponding value cannot be calculated.
6. Battery icon, and to the right the total dive time in minutes.
7. Current compass heading (including programmed deviation).
8. Present marker number. For using markers, please see next chapter.
9. Destination direction arrow. The tip of the arrow is always pointing to the planned destination. If no destination is set, this arrow will not move.
10. Present speed value and units. **mpm** means that the speed is displayed in meters per minute, **kts** stands for 'knots'. The symbol  means, that the external speed sensor should be connected to get valid distance/speed readings.
11. Total distance travelled.
12. REC/HOLD marker.
13. Present dept.
14. Total Dive time.

Buttons role:



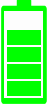

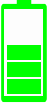

Top button – Switch to next screen

Bottom button – Switch recording between ON (RECORD state) and OFF (HOLD state). The icon in the right bottom corner shows the current recording state as described below.

 HOLD	 RECORD	REC/HOLD marker
---	---	-----------------

NOTE - When the device is in RECORD state, the red dot symbol is animated.

Battery indicator

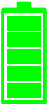Icon	Charge on %	Time left	Icon	Charge in %	Time left
	85-100	20-25h		28-45	5-10h
	68-84	17-20h		12-27	1-5h
	46-67	10-17h		1-11	<1h

Caution: The value 'Time left' is approximate!

Navigation arrow colors:

White – Normal operation with or without programmed destination






Green – Destination is set and distance to it is less than 10 meters



Orange – The diver is returning to the start point (distance > 10 meters)

GPS indicator:


Icon	Meaning	More info
(no icon)	No GPS available	The Navigation device does not include a GPS receiver or it has been permanently disabled.
	GPS location fixed	Good GPS readings are available. The GPS location is valid and accurate.
	GPS location fixed	GPS readings are available, but the accuracy may vary due to low signal strength/quality.
	No valid GPS location available	The GPS receiver cannot obtain the current location, but previous readings may be still available and valid.

Depth indicator colors:

Color	Meaning	More info
0.0	Vertical speed (up or down) is less than 9m/min (29.5 ft/min)	No special actions required from diver.
9.5	Vertical speed (up or down) is equal or greater than 9m/min (29.5 ft/min)	There is a noticeable depth change.
24.3	Vertical speed (up or down) is equal or greater than 19m/min (62.3 ft/min)	The user should be aware, that ascending or descending at this speed may have negative health effects.

The vertical speed is calculated based on measurements taken in the last 3 seconds.

6. Additional information screen (next to main)

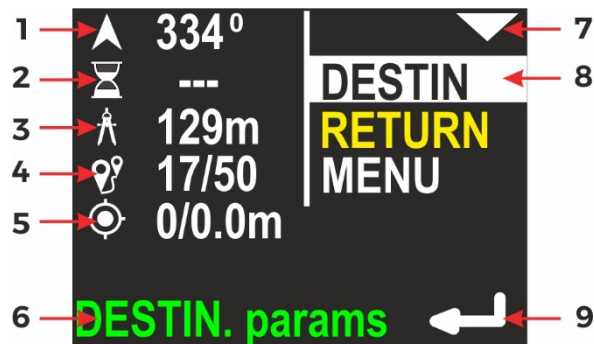

After pressing the top button on the main navigation screen, the display content changes like shown above.

On the left side of the screen, all present information are shown. On the right side there is a list with all available options. The currently selected item is marked by inverting the background and foreground color (highlighting).

In the picture above, first item (DESTIN) is selected, so left part of the display is filled with information connected to actual destination parameters:

<ul style="list-style-type: none">1 - Course to the programmed destination2 - Time left to destination (approx.)3 - Distance left to destination4 - Current record number in memory / maximum available records5 - GPS information: available satellites count / horizontal precision6 - Operation hint - when you press the lower button, you will be redirected to the screen with DESTINATION parameters	<ul style="list-style-type: none">7 - Top button role - go to the next (lower) item8 - Currently selected item9 - Bottom button role - enter/choose the selected item
--	---


Note: If some of parameters cannot be evaluated, a '---' value will be shown instead.

Buttons role:

Top button – Select the NEXT item. After 3rd press, you will return to the main navigation screen.

Bottom button – ENTER to activate the selected item.

Note: If the destination parameters are cleared (not set), this screen looks like this:

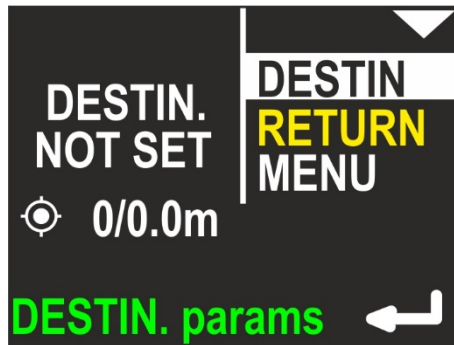

If the RETURN item is selected, the screen looks like this:



- | | |
|---|---|
| <ul style="list-style-type: none">1- The course you need to follow in order to return to the start point2 - The time required to return to the start point (approx.)3 - The distance from current location to the start point4 - Operation hint - when you press the lower button, the device will guide you back to the start point | <ul style="list-style-type: none">5 - Top button role - go to next (lower) item6 - Currently selected item7 - Bottom button role - enter/activate the selected item |
|---|---|

Buttons role:

Top button - Select the NEXT item (MENU).

Bottom button - Switch the device from navigating to DESTINATION to navigating back to the START POINT.

If the MENU item is selected, the screen looks like this:




- 1- Internal date (DD.MM.YY)
- 2- Internal time (hh:mm), in 24-hour system
- 3- Water temperature
- 4- Operation hint – when you press the lower button, other functions will be shown.
- 5- Stopwatch

The description regarding the right display side is the same as on previous picture.

Note: If the STOPWATCH is running or was stopped with count > 0, the STOPWATCH value will also be shown in green color on this screen (see below).



7. Destination parameters – setting and changing

When you activate the DESTIN(ation) option on the additional information screen (see fig. 1 on p. 6), the device will show the current destination parameters (if set) or it will suggest new ones, as shown in the following picture:

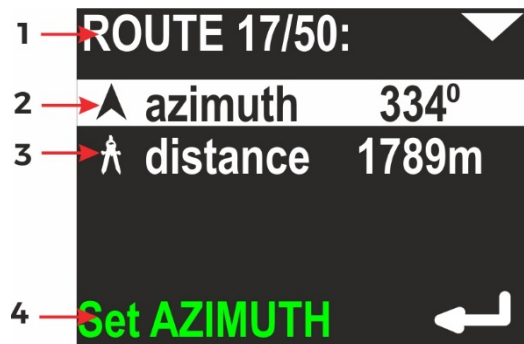


- 1 - Current route number in memory / total routes in memory
- 2 - Azimuth – planned course (including deviation)
- 3 - Distance – The distance to the planned destination
- 4 - Operation hint – When you press the lower button, AZIMUTH can be modified.

If you press the lower button (ENTER) when **azimuth** is selected, the display will change like this:

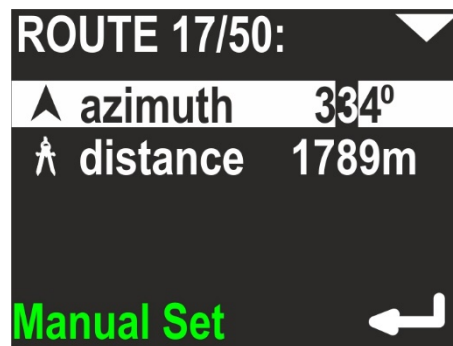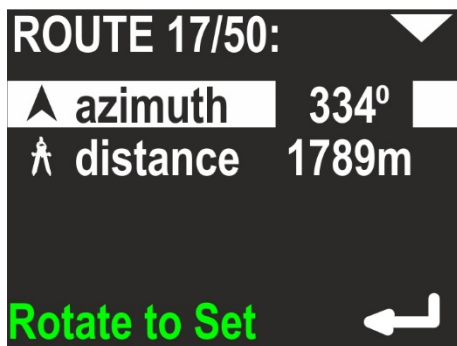

You may now rotate the device, in order to set the desired heading. Then simply press the lower button (ENTER), if the value is appropriate. You may also press the upper button now. This will allow you to set the desired **azimuth** manually digit by digit (use the lower button to change the value).

Next, set the distance – you may do it when the second line is highlighted:

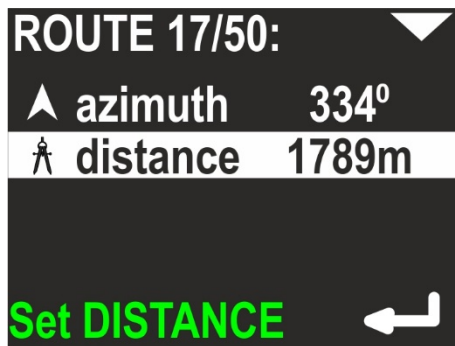

Distance value is changed also digit by digit. Pressing the top button switches to the next position, the bottom button changes the value

0 > 1 > 2 > ... > 9 > 0.

Note: The minimal allowed distance is 10m (or 0.01 mile). The device will not allow to set a shorter distance.

When both parameters (azimuth and distance) are set, pressing the top button will bring up the command line. You may choose from two commands, using the top button:

NAVIGATE - Apply values and switch to main screen (with destination)

CLEAR DESTIN(ation) - Clear all values and switch to main screen (without destination)





Note:

- The DESTINATION, once set, is held in memory until cleared or changed (power off will not clear it).
- The DESTINATION is always set or changed relatively to the current position.

8. MENU screen


If you press the lower button (ENTER) when the MENU item is highlighted on the additional information screen (see fig. 1 on p. 6), you may choose between 4 commands:

OFF - Allows you to switch off the device. The left part of the screen shows information about the present battery charge. Below that you see the device serial number (SN) (unique device identifier) and the internal software version (SV), as illustrated below:

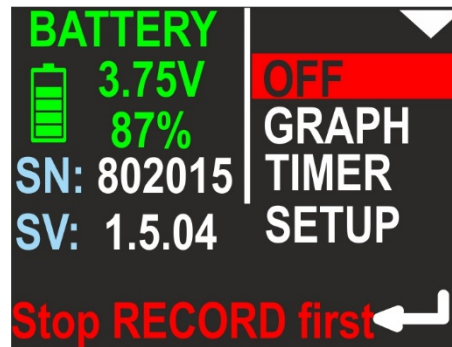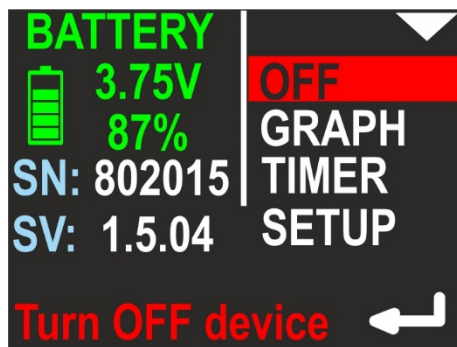


Note: You cannot switch off the device in the recording state (Hint: **Stop RECORD first** in bottom line – right picture). This prevents the user from accidentally switching-off the device.


GRAPH – Allows you to show the position and depth graphs on the device screen. More info about graphs can be found in chapter 9 and 10. On the left side of the screen, the device shows 2 numbers: Current routes in memory / maximum routes in memory. More about memory organization can be found in chapters 9 and 10.

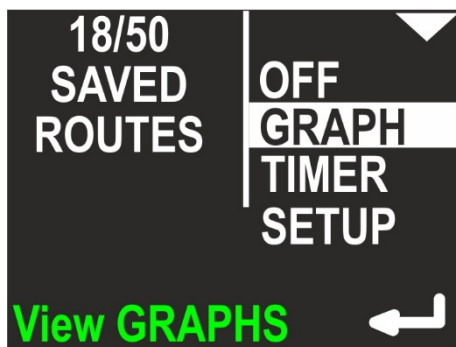

TIMER – Allows you to start, stop and clear the internal stopwatch. The stopwatch is described in chapter 11.

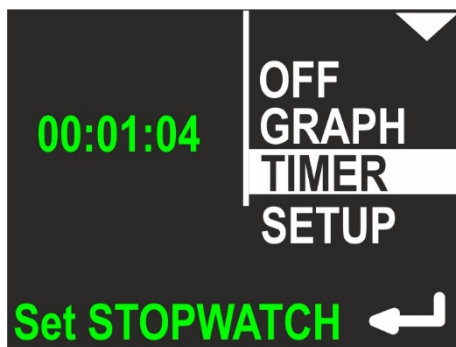


SETUP – This allows you to show and change all internal configuration parameters. More about this function can be found in chapter 12. On the left side on the screen, the most important settings are shown in short form (to avoid unnecessary activation of the configuration just to check it).

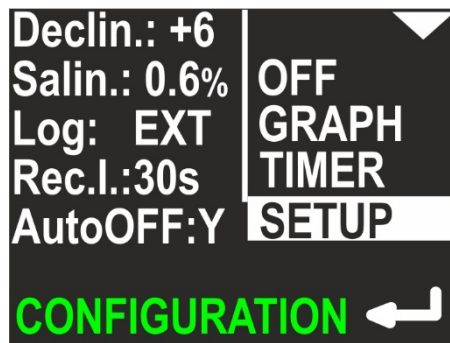

9. Depth profile graph

If you press the lower button (ENTER), when the GRAPH item on the MENU screen is highlighted, you will be redirected to the simple graph browser. The first available graph is called 'depth profile' and contains a representation of dive depth vs time, as shown below:

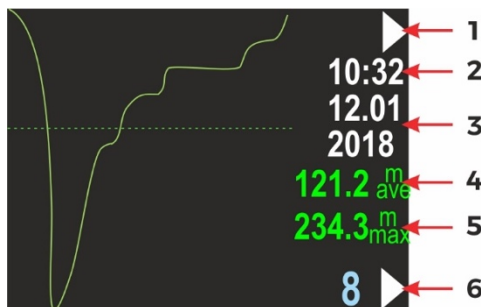


- 1 - Top button role (now - go to next graph: swim route graph)
- 2 - Time of first recorded data (hh:mm, 24-hour system)
- 3 - Date of first recorded data (DD.MM / YYYY)
- 4 - Average depth (if it can be evaluated)
- 5 - Maximum depth (if it can be evaluated)
- 6 - Route number in memory (blue) and lower button role (now - go to the next route number)

Note:

- The internal device memory stores all dive data identified by 'route number'. When the device is switched on, the least available (empty) route number is chosen for recording current data. If all available route numbers (1-50) are used, the oldest one will be overwritten.
- Data recording can be paused (HOLD state). The graph above does not show these breaks.
- You may tilt device to left or right to change the button roles on this screen. When tilted left, the lower button switches to the previous route number. When tilted right, the lower button will allow you to delete the current route.
- If the recording time is less than 1 minute, the record will be deleted when the device is switched off.

10. Swim route graph

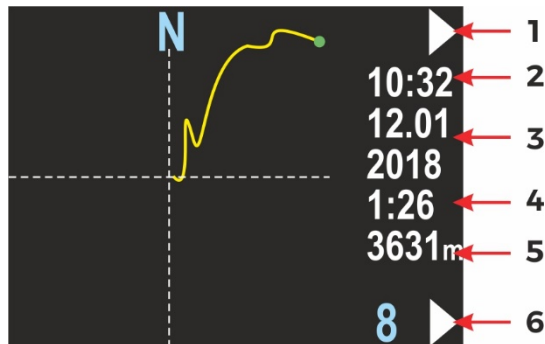


This screen presents the changes in the diver location projected on a flat surface (like on a map). The route start point is always positioned in the screen center. The route end point will be shown as a green dot, but only on the present route. Near the right edge of the screen, you will find some information elements:

- 1 - Top button role (now - go to next screen: return to main menu)
- 2 - Time of first recorded data (hh:mm, 24-hour system)
- 3 - Date of first recorded data (DD.MM / YYYY)
- 4 - Total recording time, in minutes (above 2h, this value will be shown in hours), may be blank, if the value cannot be calculated (empty record)
- 5 - Total distance in meters (above 2000m in kilometers), may be blank, if the value cannot be calculated (empty record)
- 6 - Route number in memory (blue) and lower button role (now - go to the next route number)

Note: You may tilt the device to the left or to the right, in order to change the button roles on this screen. When tilted left, the lower button brings you to previous route number. When tilted right, the lower button will allow you to delete the current route. When tilted left, the upper button brings you to the previous graph (depth profile).

TIMER / stopwatch

If you press the lower button (ENTER) when the TIMER item on the MENU screen is highlighted, you will be redirected to the TIMER/STOPWATCH control screen:

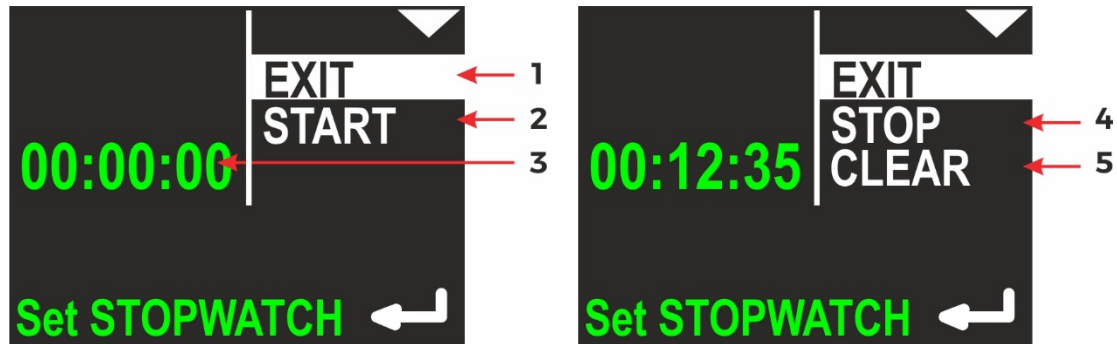

- 1- EXIT - current selected command; if you press lower button (ENTER), you will return to main navigation screen
- 2 - Timer START - option to start TIMER/STOPWATCH for counting
- 3 - Current TIMER/STOPWATCH value (up to hh:mm:ss - hours: minutes: seconds)
- 4 - Timer STOP - option to stop TIMER/STOPWATCH
- 5 - Timer CLEAR - option to clear TIMER/STOPWATCH

If TIMER/STOPWATCH is running, there will be options to STOP and CLEAR its value. STOP will leave the TIMER/STOPWATCH value unchanged (you will be able to start it again and continue counting). CLEAR will set the TIMER/STOPWATCH value to 00:00:00, but the stopwatch will not be automatically stopped with this command.

12. Device configuration (SETUP)

If you press the lower button (ENTER) when the SETUP item on the MENU screen is highlighted, you will be redirected to the SETUP menu. Device settings are organized in 2 screens. The selected function is highlighted. The top button (NEXT) will switch the selected function to the next one (below). The bottom button (ENTER) will activate the selected item.




Settings:

13. Send data

Used to activate the internal Bluetooth transmitter. Activate it before any data transmission from the navigation device to a PC or smartphone. When this function is activated, the device will not power off automatically (except when the battery is low).

14. Pressure/salinity

Shows the current pressure in milibar (green color). 1 PSI \approx 68,95 milibar. When no pressure is shown, the pressure sensor is defective.

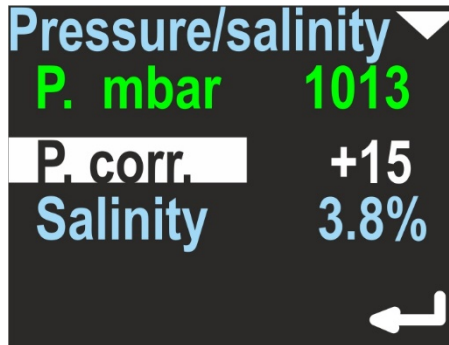


The lower line shows the pressure correction (white color) – this value will be added to the raw value of the measured pressure. It has no effect on depth calculations, but the value will be added to the pressure measurement shown above, so the user may calibrate this device as a precision barometer.

The last line allows to set the water salinity from 0.0% (fresh water) to 4.0%. This coefficient affects the pressure-to-depth transformation and should have an appropriate value.

When the item is highlighted, pressing lower button will allow to edit its value.

15. Log/speed

This navigation console can work with an external sensor (speed sensor) or without it (inertial mode). This option can be used to switch between these two modes.

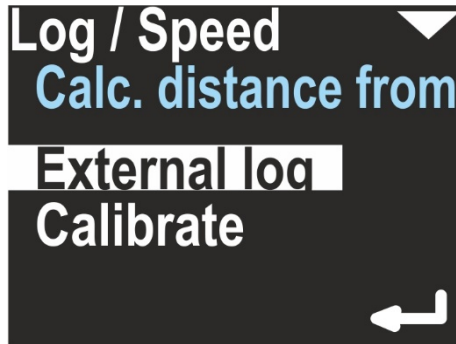

The field 'Calc. distance from' may switch between 'External log' and 'Const. speed'. The first value needs an external speed sensor (log) to be connected. If chosen, on the right side of the main navigation screen, this icon will be displayed: 🧑

The option 'Calibrate' may change its coefficient, which is used to convert sensor pulses into speed and distance:

Calibrate ext. log
Reference distance
0100m
Pulses on 100m
1522
←

If you want to recalibrate the sensor, set the chosen distance in meters (reference distance) by pressing the lower button and changing the value digit by digit. Then, you will be guided to the next item, which shows how many pulses fall in a distance of 100m. By pressing the lower button again, a new calibration begins:

EXIT
Press START
and swim exactly
1100m
START

EXIT
Press STOP
when reached
1100 m
000000 STOP

Press START and swim straight with no depth change, until the chosen distance is reached, then press STOP. The display will show you, how many log pulses were counted. If no pulses were logged, the calibration will be rejected.

When 'Calc. distance from' is set to 'Const. speed', a constant average speed is chosen to calculate the position (on the main screen, no log symbol is visible).

The option 'Calibrate' will allow you to set a constant average speed used to calculate the current position, the return time and the target time.



16. Log/speed calibration

ENC2 operation is different with and without external log sensor. Thus, the 'Calibrate' command has also different meanings, depending of the actual sensor settings.

When the external sensor is not used (**Calc. distance from = Const. speed**), the calibration means to choose an average swimming speed. When the device is in HOLD state, the distance counter does not change. When the user switches the device to RECORD state, the navigation console expects the user to swim with constant speed equal to the value set in this option (e. g. 50 m/min).

This type of operation requires from the user:

- Setting the average swim speed very precisely
- Swimming at constant speed
- Switching between HOLD and RECORD state as quick as possible

When the external sensor is used and connected to the device (**Calc. distance from = External log**), the calibration is used to get the best possible distance measurements. The sensor principle of operation is based on pulse counting. The sensor calibration factor equals the number of pulses which the speed sensor will produce while swimming a 100m distance.

A typical value is 1490 pulses on a 100m distance.

This calibration factor depends also on the sensor position on the DPV. To get best results, mark the sensor position on the DPV body and perform the calibration procedure as described below:

- Mark the **START** and **STOP** point on a straight, known distance (100-1900 meters)
- Go to **SETUP -> Log/Speed -> Calibrate log** (make sure **Active log** is set to **EXT**)
- Enter the known calibration distance in the field **log at:** ...
- Below, you will see the actual calibration factor **log 100m: 1490**. Make sure, the arrow points to this line, and press the lower button.
- The screen will show the message **Press START and swim exactly m**
- Go to **START**, set the favorite speed on your DPV, press **START** (lower button) on the navigation console, and swim as straight as possible to the **STOP** point. The screen display will show the pulse counter, which should increase with time.
- When you reach the **STOP** point, press the lower button again. The new log calibration factor will be shown on the screen.

Caution: The calibration procedure will fail, if the pulse count recorded during the procedure is far too low. In this case, the previous value will be shown in the calibration factor field (**log 100m:**)


The calibration procedure needs values in meters. No other units are available. 1 N.M. (Nautical Mile, U.S.) equals 852.0 meters. 100 feet equals 30.48 meters. 100 meters equals 328.08 feet.

17. GPS

This menu option is for information purposes only. When selected, the navigation screen will show the GPS status information as described below:

- **Valid: Y/N** – Displays, if GPS information is available now
- **Sat.cnt: 0...15** – Number of satellites used to calculate the position
- **Latt. N/S 0.00000°** - Latitude in degrees, can be **N**(orth) or **S**(outh)
- **Long. E/W 0.00000°** - Longitude in degrees, can be **E**(ast) or **W**(est)
- **Alt. 0.0** – Altitude, meters above sea level
- **D 0.0** – Horizontal deviation, always in meters (the lower, the better)

Note: When **Valid** is set to **N**, other values can be 0 (if no valid, GPS readings were obtained during the last 30 seconds) or the value might display the last valid readings. When **Valid** is set to **Y**, values equal the present reading.

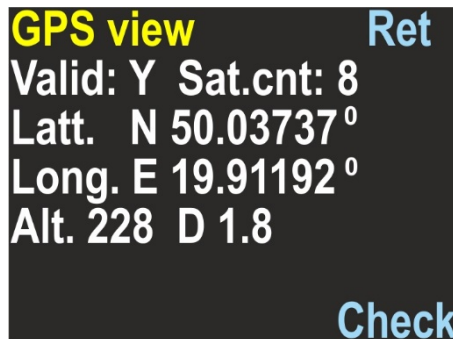

GPS information is refreshed automatically after each successful update on this screen.



The GPS state is also reported as icon on the main screen in NAVIGATION and SIMPLE mode.

The GPS receiver is automatically switched off, when the water depth is 1.5 m (4.9 ft) or more, in order to save battery. When the water depth is 0.5 m or less (1.6 ft), the GPS receiver is switched on automatically.


After power on, first GPS readings should be available after 20-60 seconds. The GPS antenna is located between the buttons, so you should not cover this point with any objects.

You may tilt the navigation console as far as possible (screen upwards) for a while, to achieve better/quicker GPS readings, but this is not necessary in most cases.

18. Time/date

This device provides an internal real time clock with calendar.

The time format is 24 hours, the Date format is DAY.MONTH.YEAR. YEAR has only 2 digits. The value 01 means the year 2001, 02 means 2002 and so on.

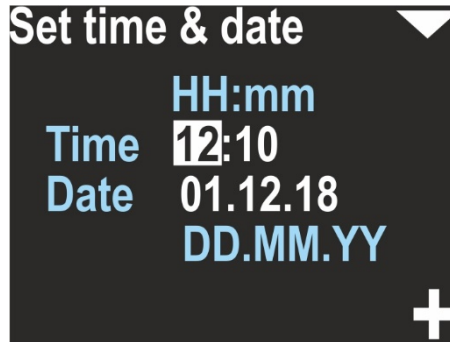


Caution:

- The device may drop date & time settings, if the battery was discharged too much. If this happens, the first step after choosing the desired mode will be setting date/time. You may skip this option, and the console will not ask you again for it, but your records will have an improper timestamp.
- The device clock accuracy is about 15 seconds per month. You may need to correct date & time settings from time to time.

19. Other settings

Miscellaneous other settings are available as a separate screen:

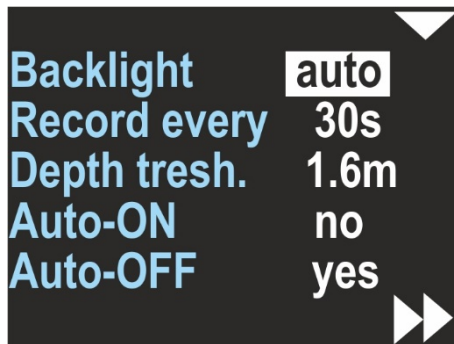

Backlight - [1,2,3,4,5,auto]- Changes the display backlight intensity. Value 1 means the constant lowest brightness (about 20%), value 5 means the constant maximum brightness, value 'auto' means that the backlight will be auto adjusted using the ambient light sensor.

Record every [2s,5s,10s,30s]- This is the maximum available time space between two records in memory. Note, that in some cases two records may be collected faster than this value, but never longer.


Depth threshold [0.5m, 1m, 1.6m]- The navigation console will count 'underwater time', when the depth is equal or greater than this value.

Auto-ON [yes/no]- If yes, device will switch on automatically when immersed in water by at least 0.3 meters (1 ft.).

Auto-OFF [yes/no]- If yes, the device will automatically power-off, if the water depth is at least 0.5 meters, RECORDING is OFF (HOLD state), and the user did not press any button during the last 5 minutes.

20. Units

Allows you to choose the units of the values presented on the screen:

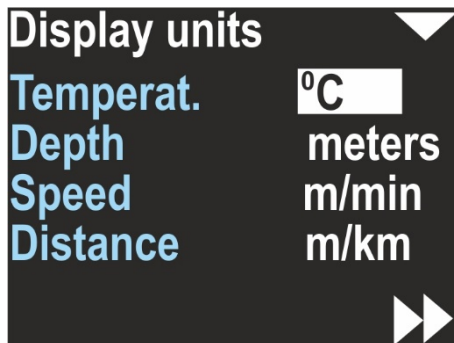

Temperat.ure) – Can be °C (Celsius) or °F (Fahrenheit)

Depth – Can be meters or feet


Speed – Can be m/min (meters per minute) or knots (nautical miles per hour)

Distance – Can be m/km (meters and above 2000m kilometers) or US.NM (United States Nautical Mile; 1US.NM = 1852m)

The selected unit is usually displayed near the values on all other screens.

21 Compass

Allows to calibrate the magnetometer (compass sensor) and to set the magnetic declination and deviation.

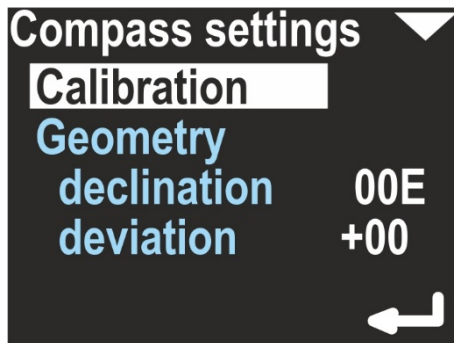


Calibration – This option is used for basic magnetometer calibration. You should use this function, when the compass direction shown on this device is improper. This is usually needed when the magnetic properties of the environment have changed.

In every location, magnetic background, declination and other magnetometer-influencing factors are different. Thus, the compass should be calibrated every time, when the location is changed, especially when there are big distances travelled (travelling to another continent, or to a distant country).

Activate this function, and rotate the device slowly in all possible directions in 8-shape. This should take at least 1 minute. A green progress bar will be shown on the screen. The lower button will be marked as BACK until the progress is less than 100% (time < 1min). Pressing this button stops this operation, and no calibration data will be changed. After 1 minute, the lower button will be marked as SET, and pressing it will cause to apply the new collected calibration values to the compass sensor.

Caution: The new calibration can be worse than the existing. If you are not happy with the results, calibrate the compass again or restore the factory settings. After the basic calibration, you should set declination and deviation to 0 (zero), clear the precision calibration (see below), and set it again.

Geometry – This option allows a precision calibration. When activated, it will show you 8 coefficients. In an ideal case, when no distortions are present, this coefficients should be: 0,4,5,90,135,180,225,270 and 315. This option allows to achieve best compass accuracy ($\sim 1^\circ$). Without it, the compass accuracy can be 3-5° depending on the calibration quality (described above).

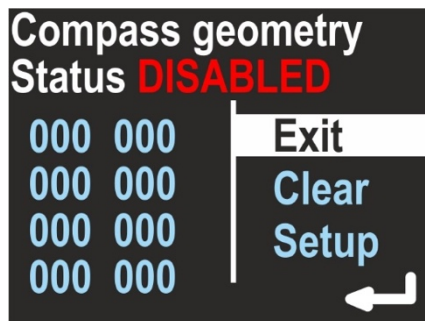


Use the top button to change the option:

Exit – Return with no changes

Clear – Switch off the precision calibration and clear all its coefficients

Setup – Make a new precision calibration


To make a new precision calibration, you should use the SET option. You will be asked to set the device in true **geographical** direction of 0, 45, 90, 135, 180, 225, 270 and 315 degrees. The device should be positioned vertically, like being attached to the DPV. The Display shows:

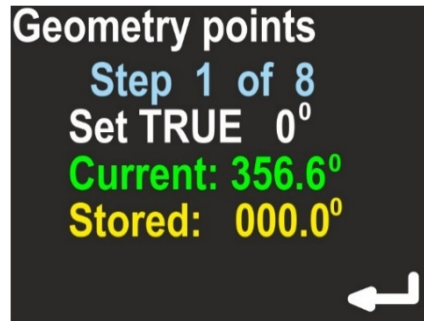

Current – Raw heading from magnetometer, without correction.

Stored – Stored value for this step.

The lower button will store the **Current** value as **Stored**, each time you press it. The upper button will guide you to the next step. On the last screen you can check, if this calibration improved the heading display. This screen is named 'Accuracy test' and will show you:

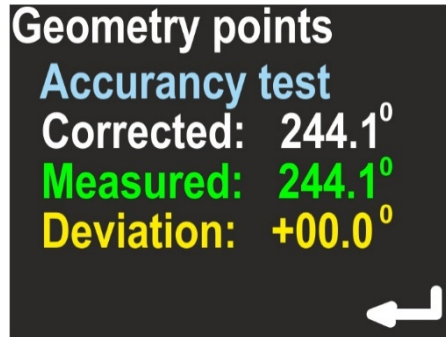

Corrected – Heading value with applied correction


Measured – Raw heading value from magnetometer

Deviation – Calculated correction; $\text{Corrected} = (\text{Measured} + \text{Deviation}) \bmod 360$.

If the corrected values are better than the measured values, press the lower button (ENTER) to store the results. If you press the upper button, no changes will be stored.

Caution: Beware of placing another compass near this device when performing this calibration, because it might affect the measurement and affects the calibration procedure.

Declination - Set magnetic declination, a constant value that will be added to the heading shown on the display (and to all position calculations). If the value is marked as E (East), the correction will be positive. When marked as W (West), the correction will be negative. The magnetic declination is a constant value, depending on your geographical region. It can be obtained from many sources.

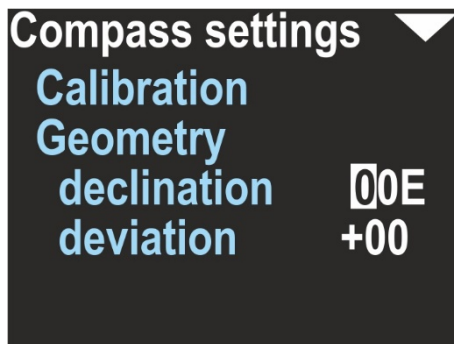

Deviation - Set magnetic deviation, a constant value that will be added to the heading shown on the display (and to all position calculations). The deviation is a constant value caused by magnetic elements near the navigation device, that cannot be removed. In most cases it will be set to 0.

Note: The compass heading on the device display (and the data recorded in memory) will use both **declination** and **deviation** coefficients. There is a common rule: **declination** is a matter of geographical location and **deviation** is caused by other equipment. That is why these two coefficients are separated.

22. Clear data

Clears all records from the internal memory. The user will be asked, if he really wants to perform this operation. It is recommended to power off and on the device after using this feature.

23. Factory reset

After using this option, all settings will be restored to factory values, and all other data will be lost.

You may want to use this option if:

- Swim records are invalid / incomplete or lost
- The device is not working correctly and you cannot find good settings


24. Exit

Exits the settings mode. The device returns to the main navigation screen.

25.Guidelines for attaching the ENC to DPVs

When using the navigation console with any DPV, you should carefully choose the mounting point for the device. An unfavorable placement may cause magnetic interferences from your vehicle elements (battery, engine) to the ENC compass sensor.

For a SEACRAFT® underwater vehicle, the recommended placement for the navigation device and its speed sensor is shown below:

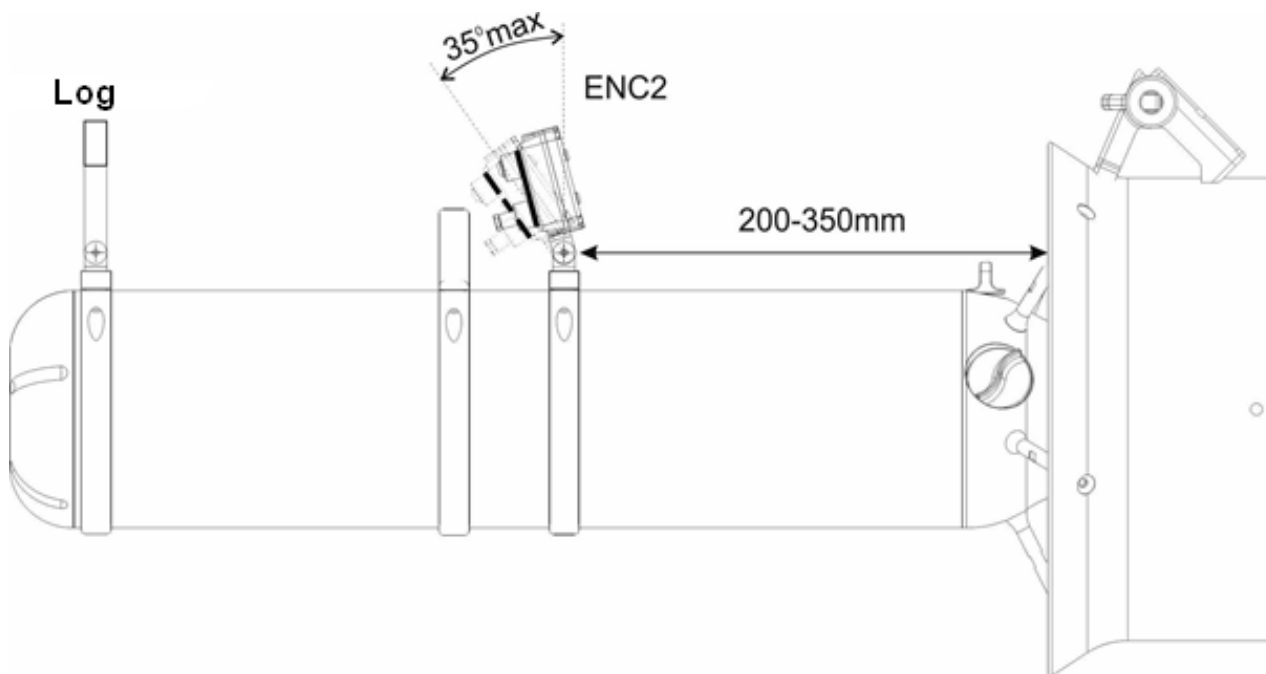

LIMITATIONS:

- ENC device should be placed at least 0,2m (7,9") from any element containing ferromagnetic material (engine, battery), permanent magnets (engine, vehicle handles, speed sensor) or electrical wires connecting the battery with the motor. If this rule is violated, compass indications may be incorrect.
- Compass indications may be less stable when ENC tilt exceeds 35° (from vertical position). If you include your vehicle lean, you should not exceed 35° inclination of ENC device vs vehicle body (see picture above).
- Log sensor should be placed away from any elements that can disrupt the flow of water. Front of vehicle is almost always the best choice. Have in mind propeller "sucking" effect, and avoid placing it in the water intake area.

If you need to place ENC device on some other kind of underwater vehicle, you have to find best mounting points on your own, using picture above as guidance.

In order to maintain the correct compass accuracy, it is recommended to always calibrate the compass before diving. Indicated by the compass the direction is calculated from the device measured by the magnetic components of the Earth measured by the magnetometers. These components change depending on the location, local geological conditions (eg the presence of ferromagnetic minerals) and are subject to periodic changes. Large ferromagnetic elements, eg shipwreck, reinforced concrete port quay or steel elements buried in the bottom, also very strongly affect the work of the compass.

A poorly calibrated compass or its disturbed operation can cause significant errors. In the case of a route with a length of 1km, 5 degrees of compass error will result in an error in the calculation of the target of almost 88m.

One should also remember about the differences between the magnetic direction indicated by the magnetic compass and the geographical direction that can be read from the maps. The difference between these courses is called magnetic declination and depends on the location. The device allows you to set the magnetic declination and offset this difference.

In order to optimally use the device, it is recommended to familiarize with the theory and principles of navigation in detail.

The log sensor is a precise electromechanical device and must be protected against mechanical impacts and contamination. After the dive, it is recommended to gently rinse with fresh water to cleanse any remaining vegetation or mineral impurities. If it is necessary to make measurements with full precision, it is recommended to calibrate the log every time.

26. Troubleshooting

Symptom	Cause	Solution
Device cannot be switched on. Display is blank and no other reactions is observed.	Excessive battery discharge.	Start charging battery for at least 30 minutes before attempt to switch on the device. After few minutes, the red led the will start blinking.
	Broken device (flooded, charged from improper source), does not react when charging	Factory service needed.
Device is switching on and off continuously.	One of the internal sensors may be damaged.	Connect the charger for 1 minute. If this will not help, allow the device to discharge its battery and to switch off. Wait 1 hour, and try to charge it again. If this will not help, return the device for service.
When switched on, the device shows "Battery is low!" message and switches off.	The battery is discharged too much.	Charge the device.
The charging process never ends.	Broken battery.	Return the device for service.
	Damaged charging cable or dirt/rust on its connector.	Clean the charger connector. Make sure it is not cut or damaged.
	Charging source too weak.	Try another charger. You may use the USB port of a laptop/PC.
The depth indication is 0 and never changes. Depth shown is invalid.	Defective pressure sensor.	Go to Settings / Pressure/salin. If the pressure is near 0, the sensor is defective and factory service is needed.

The device is not switching on automatically when immersed in water.	Pressure sensor gap filled with dirt or mud.	Wash the device using a mild stream of warm fresh water, until the problem is gone.
External sensor is connected, but no speed is shown.	Sensor connector misfit, broken or rusted.	Disconnect the sensor plug, wash and/or clean the connector, connect it again.
	The device is switched do INERTIAL operation.	Go to Settings / Log/Speed, and make sure EXT is set to 'Active Log'.
Compass is showing improper heading.	Calibration required.	Perform the calibration as described in chapter 13.1 and 13.2
	Strong external magnetic field near the device.	Try to remove the magnetic and ferromagnetic elements from the vicinity of the navigation device. Move the navigation device to another location.
	Defective sensor	Return the device for service.

Note




Recommended intervals to re-check the required accuracy of the product - 36 months from the date of purchase and the next every 24 months.

27. Before each dive ...

Make sure that battery is charged enough. Power on device and check all important settings.

In order to connect the log to the device, check the state of the plug and socket, clean any impurities, check the o-rings, apply a delicate layer of silicone grease and gently but firmly tighten.

Before diving you have to check, if output socket (in the back) is well tightened. Also you have to make sure, that none of the sealing rings is broken or missing.

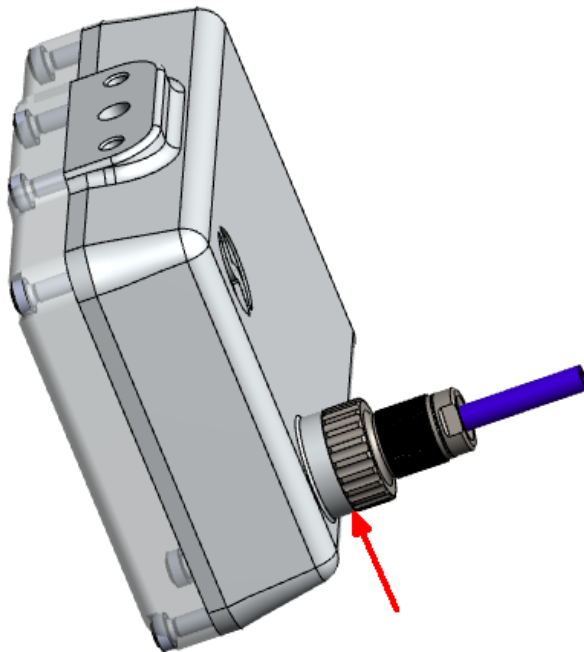



EEA DECLARATION OF CONFORMITY

Product model/product:
Electronic Navigation Console with all unique identification numbers.

Name and address of the manufacturer or his authorised representative:

Marine Tech SA
Żwirki i Wigury 17 str.
38-400 Krosno, Poland

Subject of declaration: Electronic Navigation Console with all unique identification numbers.

The abovementioned subject of the following declaration is in conformity with the relevant EU harmonisation legislation:

EN 13319:2002

Additional information:

- Any unauthorized modification will invalidate this declaration;
- This declaration is not a guarantee of performance characteristics.

Signed for and on behalf of: Marine Tech SA

Krosno, 10.01.2019
.....
(place and date)

(name, signature)

MARINE TECH Spółka Akcyjna

38-400 Krosno

ul. Żwirki i Wigury 17

KRS: 0000557411

NIP: 7811910188 REGON: 361492147



MARINE TECH SA
38-400 Krosno, ul. Żwirki i Wigury 17, POLAND
info@seacraft.eu
www.seacraft.eu